



HOW TO RENDER YOUR BAR STOOLS UNUSABLE

⚠ WARNING Risk of eye injury. Always wear eye protection during disassembly. Choking hazard. Keep small parts out of reach of children.


- 1** Disassemble your bar stools on a carpeted floor or cardboard to avoid scratching your floor.
Position a bar stool upside-down resting on its seat (D).
Remove and dispose of the eight screws in the lower braces (C). Use the provided L-wrench.

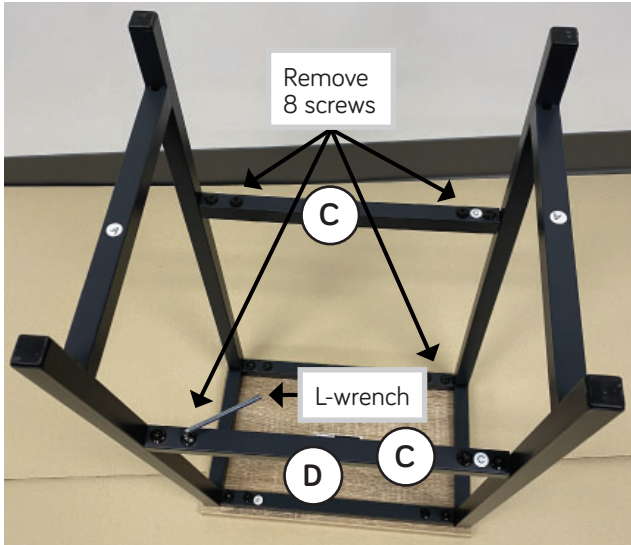

- 2** Using your hands, carefully push the ends (A) outward to spread them apart just enough to remove the two lower braces (C).
Remove both lower braces (C) and set them aside.

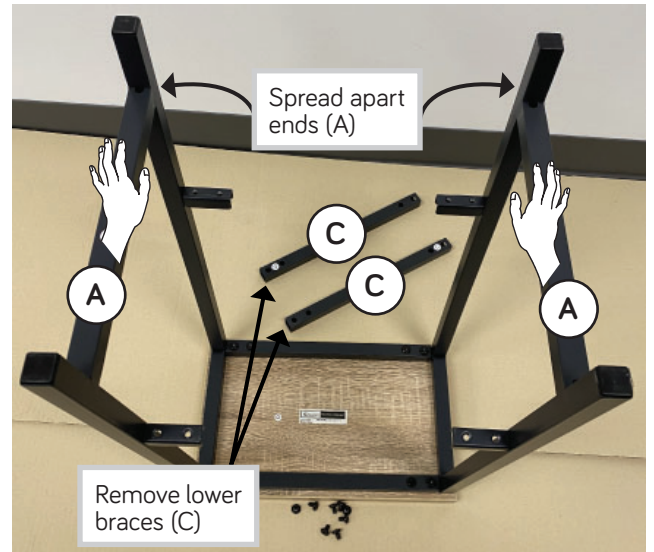

- 3** Carefully push and bend one of the ends (A) downward to a nearly horizontal position.
The end (A) should break away from the upper braces (B). The upper braces (B) should raise and pull the threaded screws from the seat.
Repeat these steps for each bar stool you purchased.

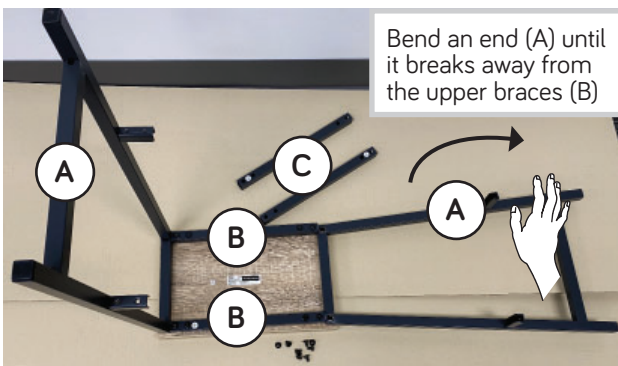

- 4** Position all of the disassembled bar stool parts together and take 1-2 photos of them.

IMPORTANT: All of the bar stools you purchased must be disassembled and shown in the same photo.

To upload/email photos, visit:
www.sauder.com/service/recall/424944

When you receive confirmation from Sauder that your photos have been received, you can dispose of the disassembled bar stools. Your refund is on its way!



For more information regarding this recall, scan the QR code or visit:
www.sauder.com/About/Public-Notices



If you need assistance, please contact Consumer Services: (866) 218-8312
Monday-Friday 9:00am-5:30pm EST